



Las Vegas Fire & Rescue Fire Prevention Division Information Sheet



Effective Date: February 1, 2011

CLV Ordinance #6124

The items listed are basic information only. Codes are subject to change. Additional requirements may apply.

Posting of Occupant Load

The Occupant load is calculated and issued by the Building Official. **IBC 110.2**

Every room or space that is classified as a Place of Assembly shall have the occupant load posted in a conspicuous place, near the main entrance or exit access. **IFC 1004.3**

Sub-dividable rooms. Rooms capable of being sub-divided into smaller spaces that are capable of an occupant load of 50 or more persons shall install *Occupant load signs* within those spaces at the main exit.

Sign Construction. Signs shall be constructed of durable material, with a minimum 1 inch letters and numbers, on a contrasting background to be readily visible.

The specific requirements for Occupant Load can be found in **Section 1004** of the **International Fire Code**.

Example:

MAXIMUM ROOM CAPACITY _____ PERSONS
--

Las Vegas Fire & Rescue
Fire Prevention Division
(702)229-0366
www.lasvegasnevada.gov/LawsCodes/fire_code.asp